
## **Instruction Manual**

## **Cordless Handheld Vacuum Cleaner**

Model: BHV10

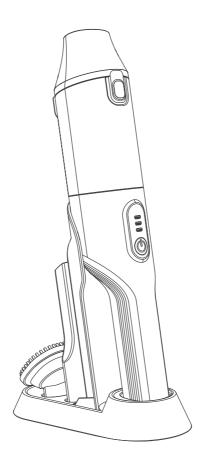



## Customer Support

#### THANK YOU FOR PURCHASING.

Your satisfaction is always our first priority. We are committed to delivering the best products and services in the way our customers want. Whenever you have any problem, please contact our Consumer Support.

## **Contents**

Warning And Safety Precaution	02
Product Introduction	03
Charging	03
Indicator	04
The Use Of Handheld Vacuum	04
Cleaning And Maintenance	05
The Dismantlement And Disposal Of The Battery	06
Troubleshooting	07
FCC Statement	07
Technical Specifications	07

## **Warning And Safety Precaution**


To reduce dangers, such as body injury, fire, shock, property damage, caused by improper use, please read the following instruction carefully.


- Do not let young children wield it or use it as a toy, please use it under adult supervision when using it near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children are not allowed to play with the equipment. Cleaning and maintenance can't be carried out when unsupervised.
- The product is only provided for family, please do not use for business or industry.
- Please do not pull the electrical wire to unplug the plug.Please unplug by grasping the plug and not the cord.
- · Please do not use it outside.
- Only wield the product according to the brochure, and only use the recommended accessories by the manufacturer.
- If the battery adapter is damaged, it must be replaced by a professional to avoid danger.
- Please do not use the vacuum to suction some item acute or hard, such as glass, rivet, screw, coin, that kind of things may break the vacuum.
- Please do not suck the ash from walls, in fireplaces or of coals with the vacuum.
- Do not use as an attachment to power tools for dust collection.
- Please do not use to suction dust or smoke, such as hot coal, stub, matches.
- Do not clean flammable or combustible materials (such as lighter liquid, gasoline, alcohol or kerosene) with the vacuum. And its use in areas that may be vacuum is also forbidden.
- Do not use to suction toxic solutions (such as chlorine bleach, ammonia, and drain cleaners).
- Do not use the vacuum in a closed area with paint, paint thinner, mothproof substance, flammable dust, and other explosive or poisonous steam.
- Keep the nozzle away from hair, face, fingers, bare feet or loose clothing.
- Please do not insert accessories while the device is running.
- Check whether the device and adapter are visibly damaged regularly.

- If the shell is damaged or there is other damages, the device must not be used.
- Please do not try to dismantle the device, the adapter or replace connected wire by yourself. It must be maintained by professional maintained center to do that, and it is considerable dangerous to users if with improper operation.
- Keep the power cord away from heated surfaces (such as cookware and other hot surfaces).
- Risk of electric shock. Do not hold the plug or device with wet hands.
- During operation, do not point the vacuum cleaner at people or animals.
- Be sure to turn off the device before connecting the charging dock.
- Do not leave the appliance unattended when it is switched on.
- Only use the charging stand on a flat and stable surface.
- · Keep the work area well lit.
- Do not use it without the dust cup and filter installed.
- · Do not use to suction any liquid.
- Risk of electric shock. To avoid the risk of electric shock, do not put the device or charging base into water or other liquids.
- The machine can be used only on dry surfaces.
- In order to avoid fire and explosion, please check whether the machine and charging stand are damaged before use. Do not use damaged vacuum cleaner or charging stand.
- · Be extra careful when cleaning on the stairs.
- Before installing and using it, ensure that the filter is completely dry after routine cleaning.
- After routine maintenance, make sure that the dust cup and filter are installed correctly.
- · Make sure the accessories are not blocked.
- This product has a rechargeable lithium ion battery.
   Do not incinerate the battery, otherwise it will explode at high temperature.
- Ensure that the location of the wire is not stepped on, tripped, or otherwise damaged or stressed.
- If the air flow is restricted, do not use; if the air passage is blocked, turn off the it, Clear all obstacles, and then restart.
- Do not pull the cord around sharp edges or corners.


Please keep this instruction manual for future use.


## **Product Introduction**

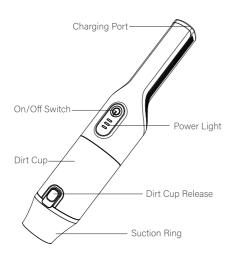

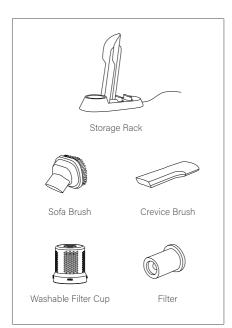


## Charging

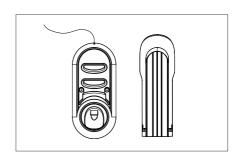

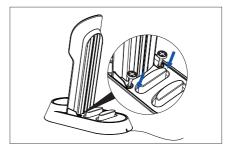

1. As the picture shows, use screws to fix the charging stand.

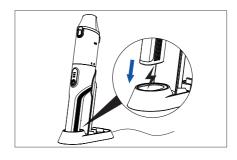

- 2. As the picture shows, Insert the nozzle upward into the charging base.
- 3. Plug in the charger. The charging indicator will flash continuously (slowly).
- 4. When charging, the charger may become hot, which is completely normal and safe.

#### Charging (CONT.)

Connect the device to the plugged-in charger, and the charging indicator will light up. It is charging indefinitely with no damage or danger. The battery cannot be "overcharged" with the included charger.


#### Note

When using it for the first time, fully discharge it to ensure the normal use of the battery.

#### **△** Warning

Please charge the discharged battery within 1 week. If the battery is in a discharged state, the battery life will be greatly shortened.

### **Indicator**

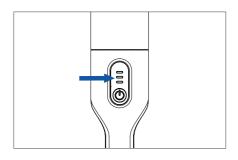


- If the device detects that the battery is low, the last charging indicator will flash quickly.
- When charging the device, the blue indicator will light up and flash continuously.
- After fully charged, the three-segment indicator will remain blue continuously.
- . When using this product, the indicator is blue.


# The Use Of Handheld Vacuum

#### **Marning**


Please do not use it if the filter is not completely dry, or incorrectly installed.

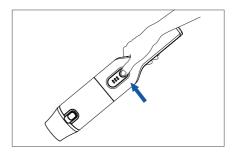


1. Press the power button, press once for low gear, press twice for high gear, press again to turn off.

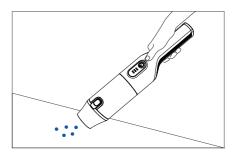

2. Point the nozzle to the surface which is ready to wash.

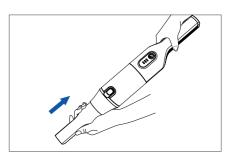

## The Use Of Handheld Vacuum (CONT.)

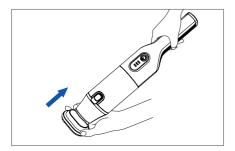

3. The machine can clean the workshop, vehicles, couch, and carpets with additional accessories. What should be done is to push the brush in to the machine.

The attachments must be installed while the device turns off.

Return the product to the charger immediately after use, so that it can be fully charged for use next time. Make sure that the product is fully meshed with the charger base.

# Cleaning And Maintenance


Cleaning and maintenance is necessary to maintain the best cleaning performance, as follows:

Carefully clean the dust cup and filter.

Clean The Dust Cup

#### **Marning**


It is carried out while the power is off.

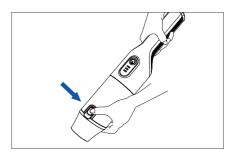




1. Point your handheld vacuum cleaner to the top of the trash can, press the dust cup release button, then the dust cup will release.

## Cleaning And Maintenance (CONT.)

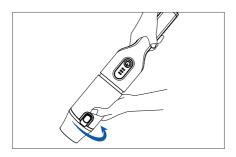

2, Swirl it according to the signs, remove the dust cup for thoroughgoing clean .

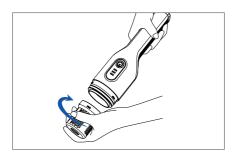

- 3. Rotate the filter to remove the entire filter part.
- 4. Tap or shake the dust cup filter to remove dust and debris.
- 5. Wipe the dust cup gently with a dry cloth to remove dust.

#### **Important**

Wipe and clean the dust cup and the body of the device before assembling to avoid abrasion due to dust particles.

#### Clean The Filter



The filter part can be cleaned with warm water. After drying the filter, proceed installation of putting it back to handheld vacuum cleaner.

#### Note

Only get the maximum dust collection by using an clean filter and empty dust cup.

If dust starts to fall out of the product after it is turned off, this indicates that the dust cup is full and needs to be cleaned. Clean the filters regularly with warm water to make sure they are completely dry before using them again. The cleaner the filter, the better the performance of the product.

#### **Important**

The correct installation of the filter is very important before use.

# The Dismantlement And Disposal Of The Battery



This product uses a lithium-ion rechargeable and recyclable battery. When the battery is no longer fully charged, it should be recycled. Do not incinerate or chuck to a compost.

## **Troubleshooting**

#### The machine does not work.

The battery runs out.
 Charge the battery.

## The machine does not suck or gently sucks stuff.

- The dust cup is full.
   Empty the dust cup.
- The dust cup is not correctly assembled.
   Correctly place the container and solidly assemble it.
- The filter needs to be cleaned.
   Follow the instructions about how to clean the filter on Page 6.
- The battery needs to be charged.
   Charge the battery. Follow the instructions about how to charge the battery on Page 3.
- The filter is wet.
   Dry thoroughly before use.

#### The machine overflows with visible dust.

- The dust cup is full of stuff.
   Empty the dust cup.
- The filter is missing or not correctly assembled. Check whether the filter is correctly assembled.
- The dust cup fabric filter has a hole or a puncture and needs to be replaced.
   Replace the filter.

#### The machine can not be charged.

 The adapter is not correctly connected with the socket.

Check whether the charger and socket is solidly connected.

The charger is wrong.
 Use and only use the charger which is compli-

mentary in the package.

### **FCC Statement**

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

## **Technical Specifications**

Model	BHV10	
Battery voltage	11.1 V	
Motor watts	90W	

#### **Marning**

When the filter is clogged, the machine operates in Power Mode, which may cause the machine to shut down and enter a protective state.

Please clean the dust cup and filter promptly after each use.

#### DOC

Learn more about the UK Declaration of Conformity, Please click below link to download: https://1855005.hlcode.top/?id=NJhABV7

Learn more about the EU Declaration of Conformity, Please click below link to download: https://1855005.hlcode.top/?id=NJhABVP

Erfahren Sie mehr über die EU-Konformitätserklärung. Klicken Sie zum Herunterladen auf den folgenden Link: https://1855005.hlcode.top/?id=NJhABVW

